| | APPENDIX | <i>₩</i> | MO NOR 25 (1995) 1997 (1995) | |
|--|----------------|---------------------------------------|------------------------------|---------------|
| | AUTOMATIC TANK | | | |
| Facility Name: Amoco | | Owner: Ama | ·s Expo | |
| Address: 13 38 W. Sample ST. City State 7in Code: | | Address: 5316 Western AVR | | |
| City. State, Zip Code: South Bend, IN | | City, State, Zip Code: South Berd, TM | | |
| Facility I.D. #: | | Phone #: | | |
| Testing Company: Mand M Service | | Phone #: | Date: 2 -/2 -25 | |
| This procedure is to determine whether the ATG is operating properly. See PEI/RP1200, Section 8.2 for the inspection procedure. This procedure is applicable to tank level monitor stems that touch the bottom of the tank when in place. | | | | |
| Tank Number | 1 | 32 | 4 | 92 |
| Product Stored | RUL | Rem | 052 | RULZ |
| ATG Brand and Model | Veeder | Root TL | 5350- | |
| 1. Tank Volume, gallons | 12,044 | 4,014 | 4018 | 4,015 |
| 2. Tank Diameter, inches | 120 | 96 | 96 | 120 |
| 3. After removing the ATG from the tank, has it been inspected and any damaged or missing parts replaced? | ØYes □No | D∕Yes □ No | ØYes □No | ØYes □No |
| 4. Float moves freely on the stem without binding? | ZZYes □ No | ØYes □No | ØYes □No | ØYes □No |
| 5. Does the fuel float level agree with the value programmed into the console? | ØYes □ No | Ø Yes □ No | ØYes □No | ØYes □No |
| Does the water float level agree with the value programmed into the console? | E)Yes □ No | Ø Yes □ No | ØYes □No | ⊠Yes □No |
| 7, Inch level from bottom of stem when 90% alarm is triggered. | | | | |
| 8. Does inch level at which the overfill alarm activates correspond with value programmed in the gauge? | 22√Yes □ No | Z∕Ýes □ No | ØYes □No | ÆIYes □No |
| 9, Inch level from the bottom when the water float first triggers an alarm. | 2 | 2 | 2 | 2 |
| 10. Does inch level at which the water float alarm activates correspond with value programmed in the gauge? | Ø∕ves □No | ØYes □No | ØYes □No | ØYes □ No |
| If any answers in Lines 3, 4, 5, or 6 are "No," the system has failed the test. | | | | |
| Test Results | ØPass □Fail | ØPass □Fall | ØPass □ Fall | Ø Pass □ Fail |
| Comments: IDHS: UC109415 exp: 9/1/2025 | | | | |
| | | | | |

Tester's Name Doug Snith Tester's Signature Colombia